

T-REX

Billet Grilles

55761

**08-12 NISSAN
PATHFINDER**

55761

**08-12 NISSAN
PATHFINDER**

UPPER CLASS SERIES BUMPER GRILLS

Recommended Tools:

Phillips Screwdriver
8mm Socket or Nut Driver

Parts List / Hardware:

1 Upper Class Inserts
4 ½" X ½" L-Brackets
4 6/32 Nylon Lock Nuts

Read and understand instructions before attempting installation

Step 1

Remove six plastic fasteners from the top plastic cover to allow access behind grille. Release four plastic clips from the bottom of the grill assembly. Release the clips that hold the outer grille shell. There are two on each side that use a flathead screw driver (1). Remove the complete grille as one unit.




Step 2

Center the grille into the bumper. From the backside of the grille, place a ½" L-Bracket and a 6/32 Nylon Lock Nut on to each stud (2). Make sure that the grille is centered and tighten down

Step 3

Re-install the grille.

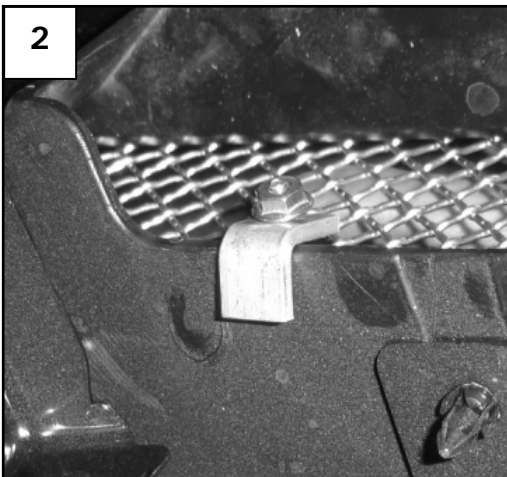

*Thank you for purchasing your T-Rex billet grille.
9/25/07*