6315721 / 6315721-BR & 7315721 / 7315721-BR

2013-2014

FORD F-150



6315721 / 6315721-BR & 7315721 / 7315721-BR

2013-2014 FORD F-150

2013-2014 FORD F-150 Laser Torch Series Grille

Laser Torch Series C Install time: 45 Mins.

(2) Flatnuts

For off-road use only

TOOLS REQUIRED: Plastic Prybar Die Grinder Drill & 1/8 Drillbit

- PARTS LIST: (1) Mesh Grille (8) L-Brackets (8) 6/32 Nylon Lock
- (8) 6/32 Nylon Lock Nuts
- (2) #8 Screws PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
- BEFORE ATTEMPTING INSTALLATION.

Step 1 Remove Factory Grille Shell

• Remove 6 Bolts along the top of the Grille Shell. (Fig. 1)

• Remove 2 Clips along the Vericle Support Bar. (Fig. 2)

• Place the Plastic Prybar in betwen the Grille Shell and Hood, Firmly start nudging away the Grille Shell from the Hood. (the Grille Shell is latched on with Clips.). (Fig. 3) Remove the Grille Shell.

Step 2 Installing Grille


• With a Die Grinder, Remove the Vertical and Horizontal Plastic Bars that are around the Grille. (Fig. 4 & 5)

• Place the Grille into the Grille Opening. (Fig. 6)

• Place L-Brackets onto the Threaded Studs that are on the Grille and use Nylon Lock Nuts. (Fig. 7)


• Use the 1/8 Drillbit to Drill through the Brackets that are on the Sides of the Grille and place #8 Screws through them, Place Flatnuts behind to Thread the #8 Screw. (Fig. 8)

INSTALLATION COMPLETE

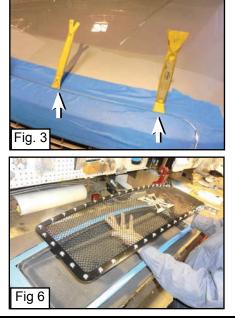






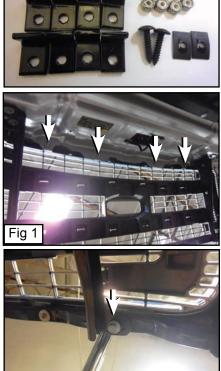



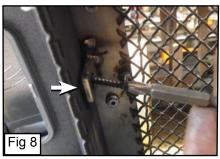

Thank you for Purchasing a T-Rex Product.